



Equi-TILE

ROUTINE CLEANING AND INSPECTION

EquiTile should be visually inspected and cleaned on an established interval. The frequency will depend on the environment and level of use. **EMC recommends an inspection and cleaning interval of not greater than one time per month.**

CLEANING & MAINTENANCE

a. Standard Cleaning & Maintenance Options:

1. Sweep the surfacing with a stiff bristle outdoor broom to remove larger debris and accumulated dirt and dust.
2. Spray the surfacing with clean water using a standard hose to remove contaminants from the surfacing as well as the pores of the system.
3. Vacuum the surface with a commercial grade vacuum to remove loose particles from the surface, transitions, joints and pores of the system.

b. Cleaning Stains

1. Use a mild cleaning soap with a soft bristle brush or mop to scrub the affected area.
2. Use clean water to thoroughly rinse any area covered with soap residue.

c. Annual Maintenance Guidelines:

1. Remove any debris or other loose material.
2. Broom the entire surface of the system.
3. Vacuum the entire surface of the system.
4. Spray the surfacing with clean water.
5. Use a mild cleaning soap with a soft bristle brush or mop and scrub the surface in 5 foot by 5 foot sections. Thoroughly spray the affected area with clean water to remove any soap residue.
6. Continue cleaning with mild soap and water until the entire surfacing system has been cleaned.